

Description

SOUND330_AP is a loop powered type A for indoor use sounder in conformity with standard EN54-3 and EN54-23.

Each sounder is provided with integrated EN54-17 isolator circuit, that automatically takes action in case of need. Addresses can be programmed by means of the programmer or with the addressing function of Teledata fire alarm panels



Technical Specifications

Loop's voltage	27V
Average current consumption	120 uA (@ 27V)
Current consumption	38 mA (@ 27V-line)
Voltage on siren	24Vdc
Power	1,45W
Sounder output	70-100dB
Coverage	W-2,4-5
Operating temperature range	From -10°C (min) to +55 °C (max)
Humidity	85% RH (no condensation)
Dimensions	Diam: 100mm Height: 125mm
Maximum wire gauge	1.5 mm ²
IP rate	IP 65

Setting The Address

Modules can be addressed by using a special hand-held programming unit (**ONEPROGRAMMER_AP**). Addresses may be selected over the range from 1 to 240, although, of course, each device on the loop must have a unique address.

- Connect the programmer to the module using the proper cable (refer to the **ONEPROGRAMMER_AP** instruction manual).
- Installing all modules and other loop devices, apply power to the loop in accordance with the panel's installation instructions.

Device's Mounting

According to local electrical regulations, mount securely to a single gang box using the provided screws.

Maintenance

Test the siren periodically according to local codes of practice. Those devices contain no serviceable part, so, should a fault develop, return them to your system supplier for exchange or disposal, according to warranty conditions.

Caution

Disconnect loop power before installing the sounders.

WARNING
Electrostatic Sensitive Device.
Observe precautions when handling and making connections.



Siren Module Configuration Fig.1

To connect the sounder it's necessary to connect it on the loop respecting loop polarity.

Sounder has insulator on board; It works between two negatives (1&3 pin).

Terminal	Description
1	Loop line IN (-) Loop Negative input
2	Loop line OUT (-) Loop Negative output
3	Loop line IN (+) Loop Positive input
4	Loop line OUT (+) Loop Positive output

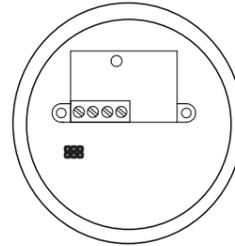


Fig. 1

Sound Configuration

Fig.2a FLASHING LIST		
No	Switch (8)	Flashing Frequency
1	0	1 Hz
2	1	0,5 Hz

Fig.2c VOLUME LIST			
No	Switch (1-2)	Name	Volume
1	0-0	Low	Low
2	0-1	Med1	Medium 1
3	1-0	Med2	Medium 2
4	1-1	High	High

Sound Configuration Fig.2b

No.	Name	Freq uency	Sw itc h (6-5-4-3-2)
1	Prealarm/ Alarm	Prealarm: 800-970Hz sweet every 1 sec Alarm: continuous at 970Hz	0-1-1-1-1
2	Prealarm/ Alarm Dutch	Prealarm: 800-970Hz sweet every 1 sec Alarm: slow whoop (Dutch) is: 500-1200Hz for 3500ms then off for 500ms	1-1-1-1-1

Installing To Ensure Ip 65 Protection

To ensure IP 65 protection, back box must be drilled in pictures and hole must be protected with cable clamps as shown in fig.2 and fig.3

Diameter of holes must be 13 mm.
Cable clamps must be PG7 type.

Cable must to be in according to EN 50200 standards



Fig.2



Fig.3

Warnings And Limitations

Our devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions. Refer to and follow national codes of practice and other internationally recognized fire engineering standards.

Appropriate risk assessment should be carried out initially to determine correct design criteria and updated periodically.

Warranty

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage.

Product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product's returns policy can be obtained upon request



TELEDATA S.R.L.
Via Brescia 24 G
20063
Cernusco S.N.
Milano

**EN 54-3,
EN43-23 &
EN 54-17**
SOUND330_AP
0370-CPR-6743